

HYDRO DIMENSIONS

HD Series Walk-in Bathtubs Model 3055


INSTALLATION DETAILS

(75 gal. Operating capacity)

EXTENSION PANEL INSTALLATION

- Step 1. Install mounting clips onto end of tub
- Step 2. Slide front panel "A" into mounting clips.
- Step 2. Slide top panel "B" into mounting clips.
- Step 4. Refer to Detail "A" on fastening flange to studs and sealing.

DETAIL A

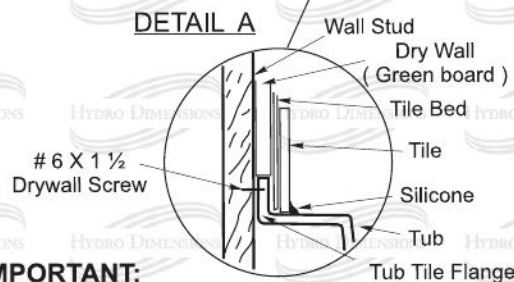


IMPORTANT:

Pre-drill and screw tub flange to studs.
Do Not force tub flange to studs, this will cause the tub door to leak

Removable access panels




Top Panel "B"

DETAIL B

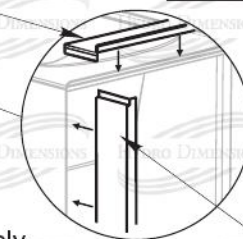

Electrical supply location

Front Panel A

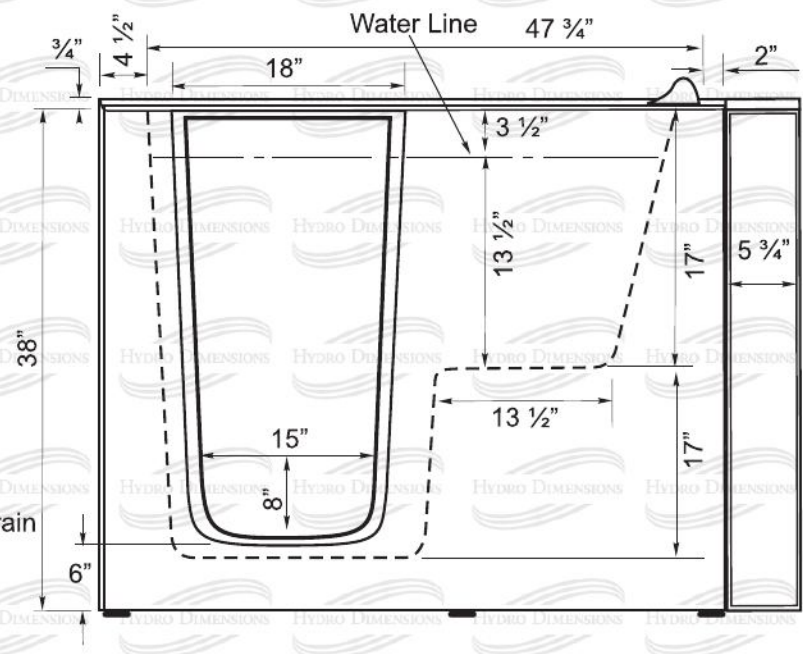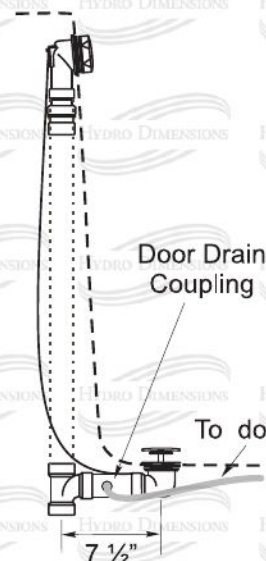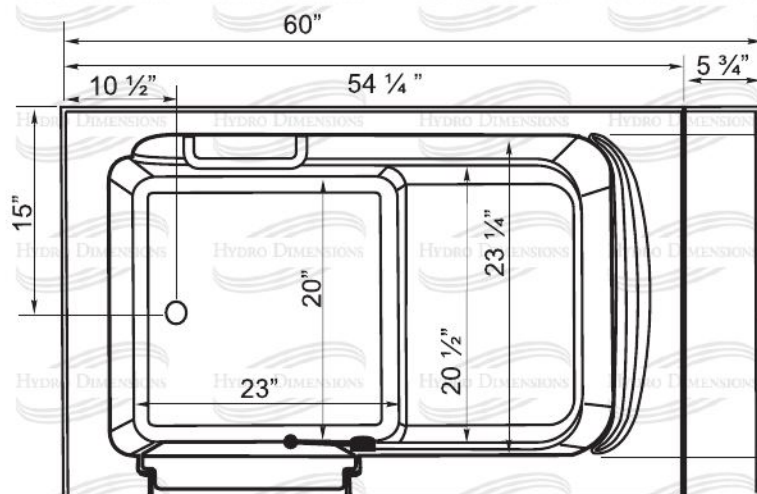

© 2012 Hydro Dimensions All rights reserved