

HYDRO DIMENSIONS

HD Series Walk-in Bathtubs Model 3155-D

INSTALLATION DETAILS

(85 gal. Operating capacity)


EXTENSION PANEL INSTALLATION

Step 1. Slide front panel "A" onto front of tub.

Step 2. Slide top panel "B" over tile flange.

Step 3. Refer to Detail "A" on fastening flange to studs and sealing.

DETAIL A

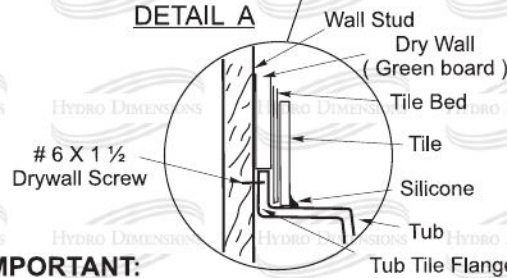


IMPORTANT:

Pre-drill and screw tub flange to studs.
Do Not force tub flange to studs, this will cause the tub door to leak

Removable access panels




Top Panel "B"

DETAIL B

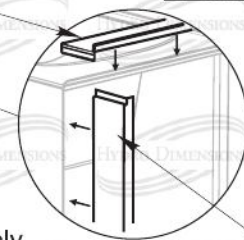

Electrical supply location

Front Panel A

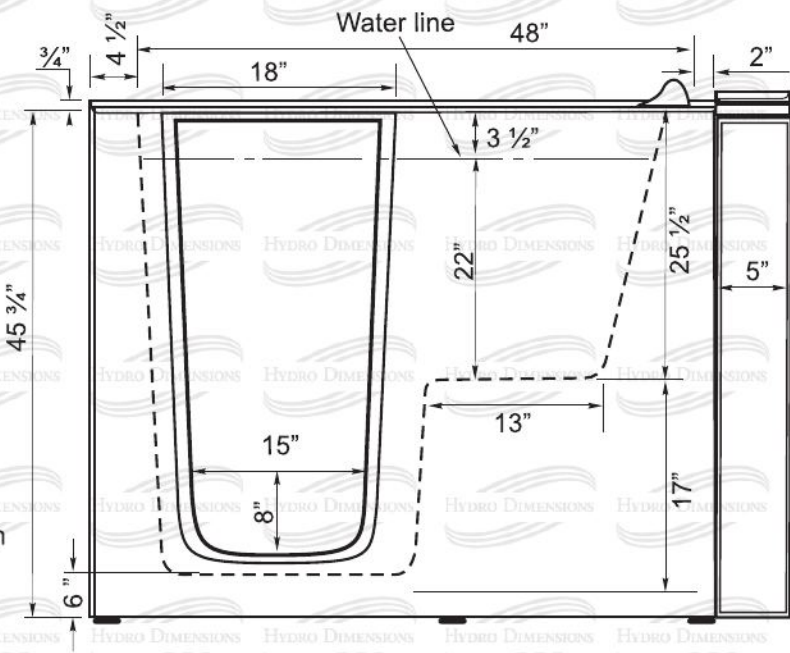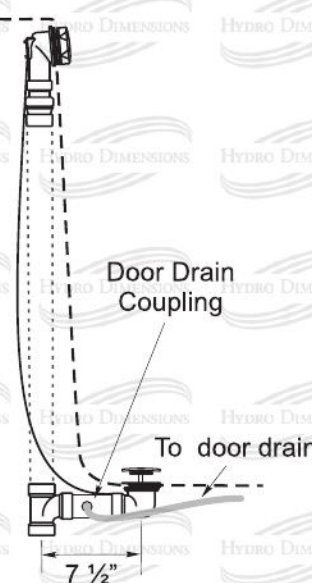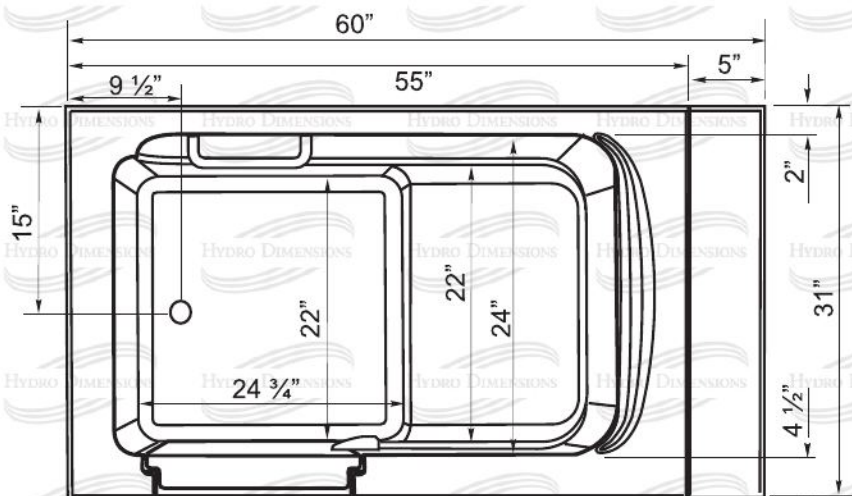

© 2012 Hydro Dimensions All rights reserved